

## Auxiliary Tools for Torque Driver

### Resin Handle for Torque Driver



Catalog No.	Color	Applicable Models
850	Orange	RTD120CN, LTD120CN, RNTD120CN, NTD120CN
851	Gray	
852	Black	
853	Green	
854	Red	
855	Blue	
856	Orange	RTD260CN, LTD260CN
857	Gray	
858	Black	RNTD260CN, NTD260CN
859	Green	
860	Red	
861	Blue	

### Adjusting Tool

This tool is used to adjust the torque of the LTD and RTD torque drivers.



Catalog No.	Applicable Models Before April 1999	Applicable Models After April 1999	Inside Diameter	Outside Diameter
46	6L,RTD&6L,RTD-N	L,RTD60CN&6L,RTD(-n)	6.1	7.2
47	12L,RTD&12L,RTD-N	L,RTD260CN&26L,RTD	7.1	9
48	26L,RTD&26L,RTD-N	L,RTD500CN&50L,RTD	8.1	11
49	50L,RTD&50L,RTD-N	LTD1000CN&100LTD	10.1	13
50	100LTD(-N)	-----	12.1	15
51	L,RTD30CN&3L,RTD& 3L,RTD-N	Unchanged	4.1	5

### Tightening Tool for LTD

This tool makes tightening with the large LTD tool much easier.



Catalog No.	Applicable Models
31	LTD500CN / RTD /TD / RNTD, FTD400CN
32	LTD1000CN / NTD, FTD8N, 16N
40	LTD2000CN

### Preset Hook Spanner For LTD /TD

This tool makes it easier to set the torque for mid to large capacity LTD and RTD drivers.



Catalog No.	Applicable Models
52	LTD260CN / RTD
53	LTD500CN / RTD
54	LTD1000CN
55	LTD2000CN

### Torque Adjusting Bar For NTD / RNTD Type Drivers

This tool is used to set the torque of preset types NTD and RNTD drivers.



Catalog No.	Applicable Models
42	NTD15CN ~ 60CN /NTD
43	NTD120CN ~ 260CN / RNTD
44	NTD500CN ~ 1000CN /RNTD

### Torque Driver Adapter

This accessory is used with TME and TM torque meters to test uni-screwdrivers and torque rivers.



Catalog No.	Applicable Models
30	U / UR LTD / RTD / NTD / RNTD FTD50CN ~ 400CN


[Print](#)

[Close](#)

©2004 Tohnichi America Corp. All Rights Reserved.